



Ref.	Part Description	075-DV	100-DV	100-DV-F
Solenoid				
1	Solenoid Handle	170228	170228	170228
2	Solenoid Repair Kit	208588-01	208588-01	208588-01
3	Solenoid O-Ring	235532	235532	235532
4	Solenoid Filter	(170368)	(170368)	(170368)
BONNET				
5	Bonnet Repair Kit	—	—	209398
6	Flow Control Handle	—	—	208393
7	Bonnet with flow control	—	—	(210334)
8	External Bleed Screw	—	—	(234999)
9	Stem	—	—	(207922)
10	Stem O-Ring	—	—	(208487)
11	Piston	—	—	(232709)
12	Piston O-Ring	—	—	(208654)
13	Bonnet	(232708)	(232708)	—
14	DIAPHRAGM REPAIR KIT	210746-03	210746-03	210746-03
15	Bonnet screws (6)	210295	210295	210295
16	Diaphragm Spring	(206944)	(206944)	(206944)
17	Diaphragm Assembly w/Filter	(170817)	(170817)	(170817)
—	Solenoid Filter	—	(170368)	(170368)
BODY				
18	Slip x Slip	—	(208771-03)	(208771-03)
—	NPT (not pictured)	(208465-03)	(208771-01)	(208771-01)
—	BSP (not pictured)	—	(208771-02)	(208771-02)
—	Angle NPT (not pictured)	—	(170376-01)	(170376-01)
—	Angle BSP (not pictured)	—	(170376-02)	(170376-02)
—	Male x Male NPT (not pictured)	—	(170892-01)	(170892-01)
—	Male x Male BSP (not pictured)	—	(170892-02)	(170892-02)
—	1" Male NPT x 1" Barb (not pictured)	—	(170893-01)	(170893-01)
—	1" Male BSP x 1" Barb (not pictured)	—	(170893-02)	(170893-02)
—	1" Male NPT x 1 ³ / ₄ " Barb (not pictured)	—	(171028-01)	(171028-01)

Note: Part numbers enclosed in brackets () are not available individually, but may be sold in assemblies or kits.