




Pumping & Piping Systems

# CLICK-IT™ VALVE LOCATOR WIRING DETAIL

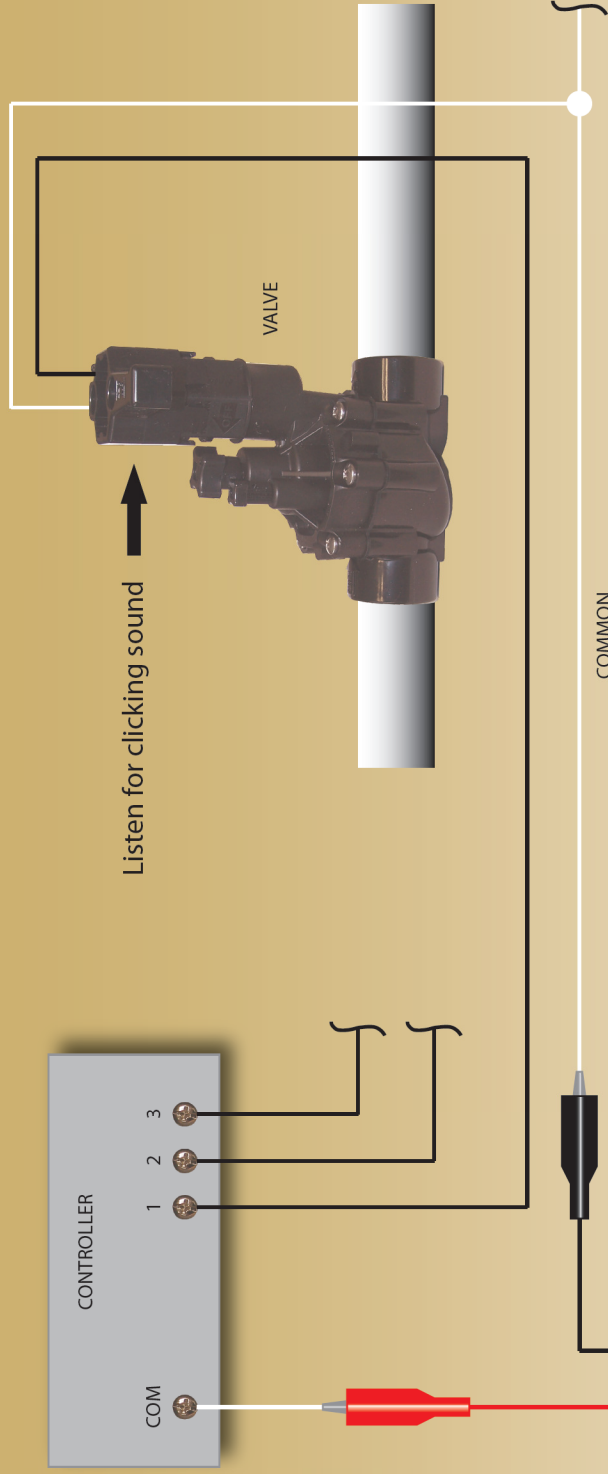

## INSTRUCTIONS FOR USING CLICK-IT™

1. Turn off the water supply to the electric valves.
2. If a relay is being used, disconnect pump start or master valve circuit at the controller.
3. Disconnect valve common wire at the controller. In instances of two or more controllers sharing a common, disconnect **all** commons.
4. Attach one lead from the CLICK-IT™ to the valve common terminal at the controller. Attach the other lead from the CLICK-IT™ to the valve common wire going to the valves.
5. Activate any station desired manually at the controller.
6. Proceed to the area where that valve most likely will be located, usually near the heads for that zone. You should hear the solenoid plunger clicking up and down and be able to locate the valve.

Note: May also be installed "in-line" for individual valve location